


## PRINTING AND FITTING SPECIFICATIONS

- Print this document on A4 sheets of paper (21 x 29.7cm).
- Ensure you print at 100 % scale.
- Measure both sides of this box to check scale is correct.
- Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- Tape the sheets together and cut around the Pack's outline
- When fitting this printed template to your bike, keep in mind that the Frame Pack will be more flexible as it is built from fabric.

10cm  
3.9in

10cm / 3.9in

## SCALE EXAMPLE OF FINAL TEMPLATE

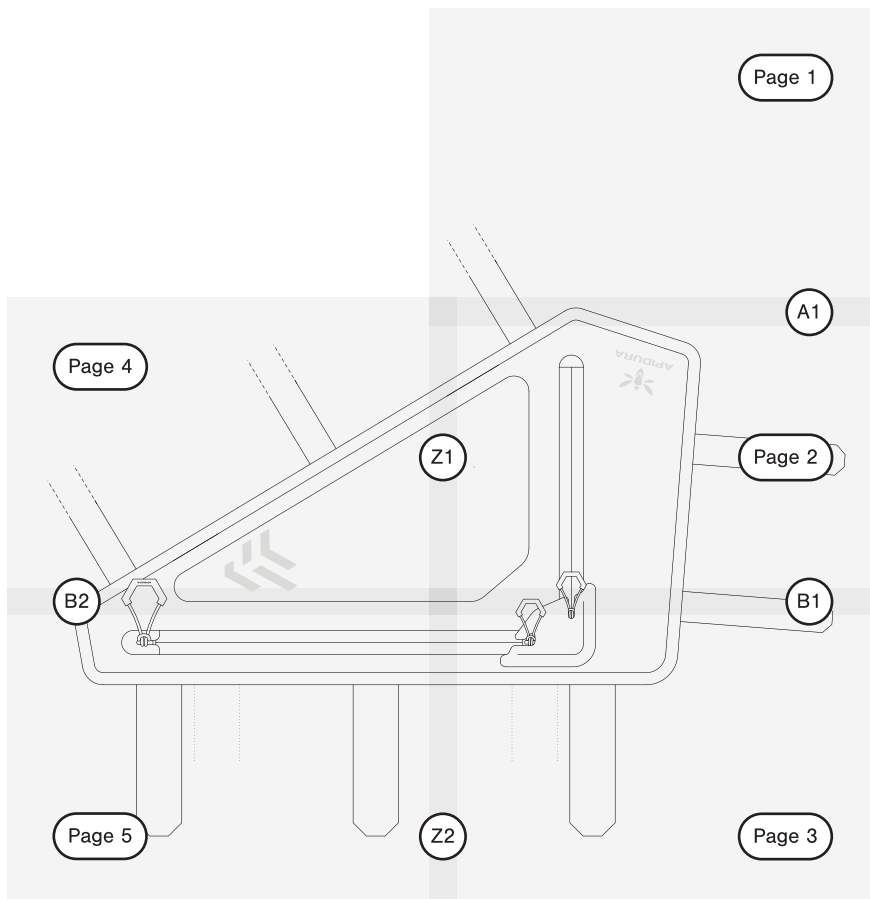


A1



(6uol u;9'0L) buol r  
s! p8;1s buip8e



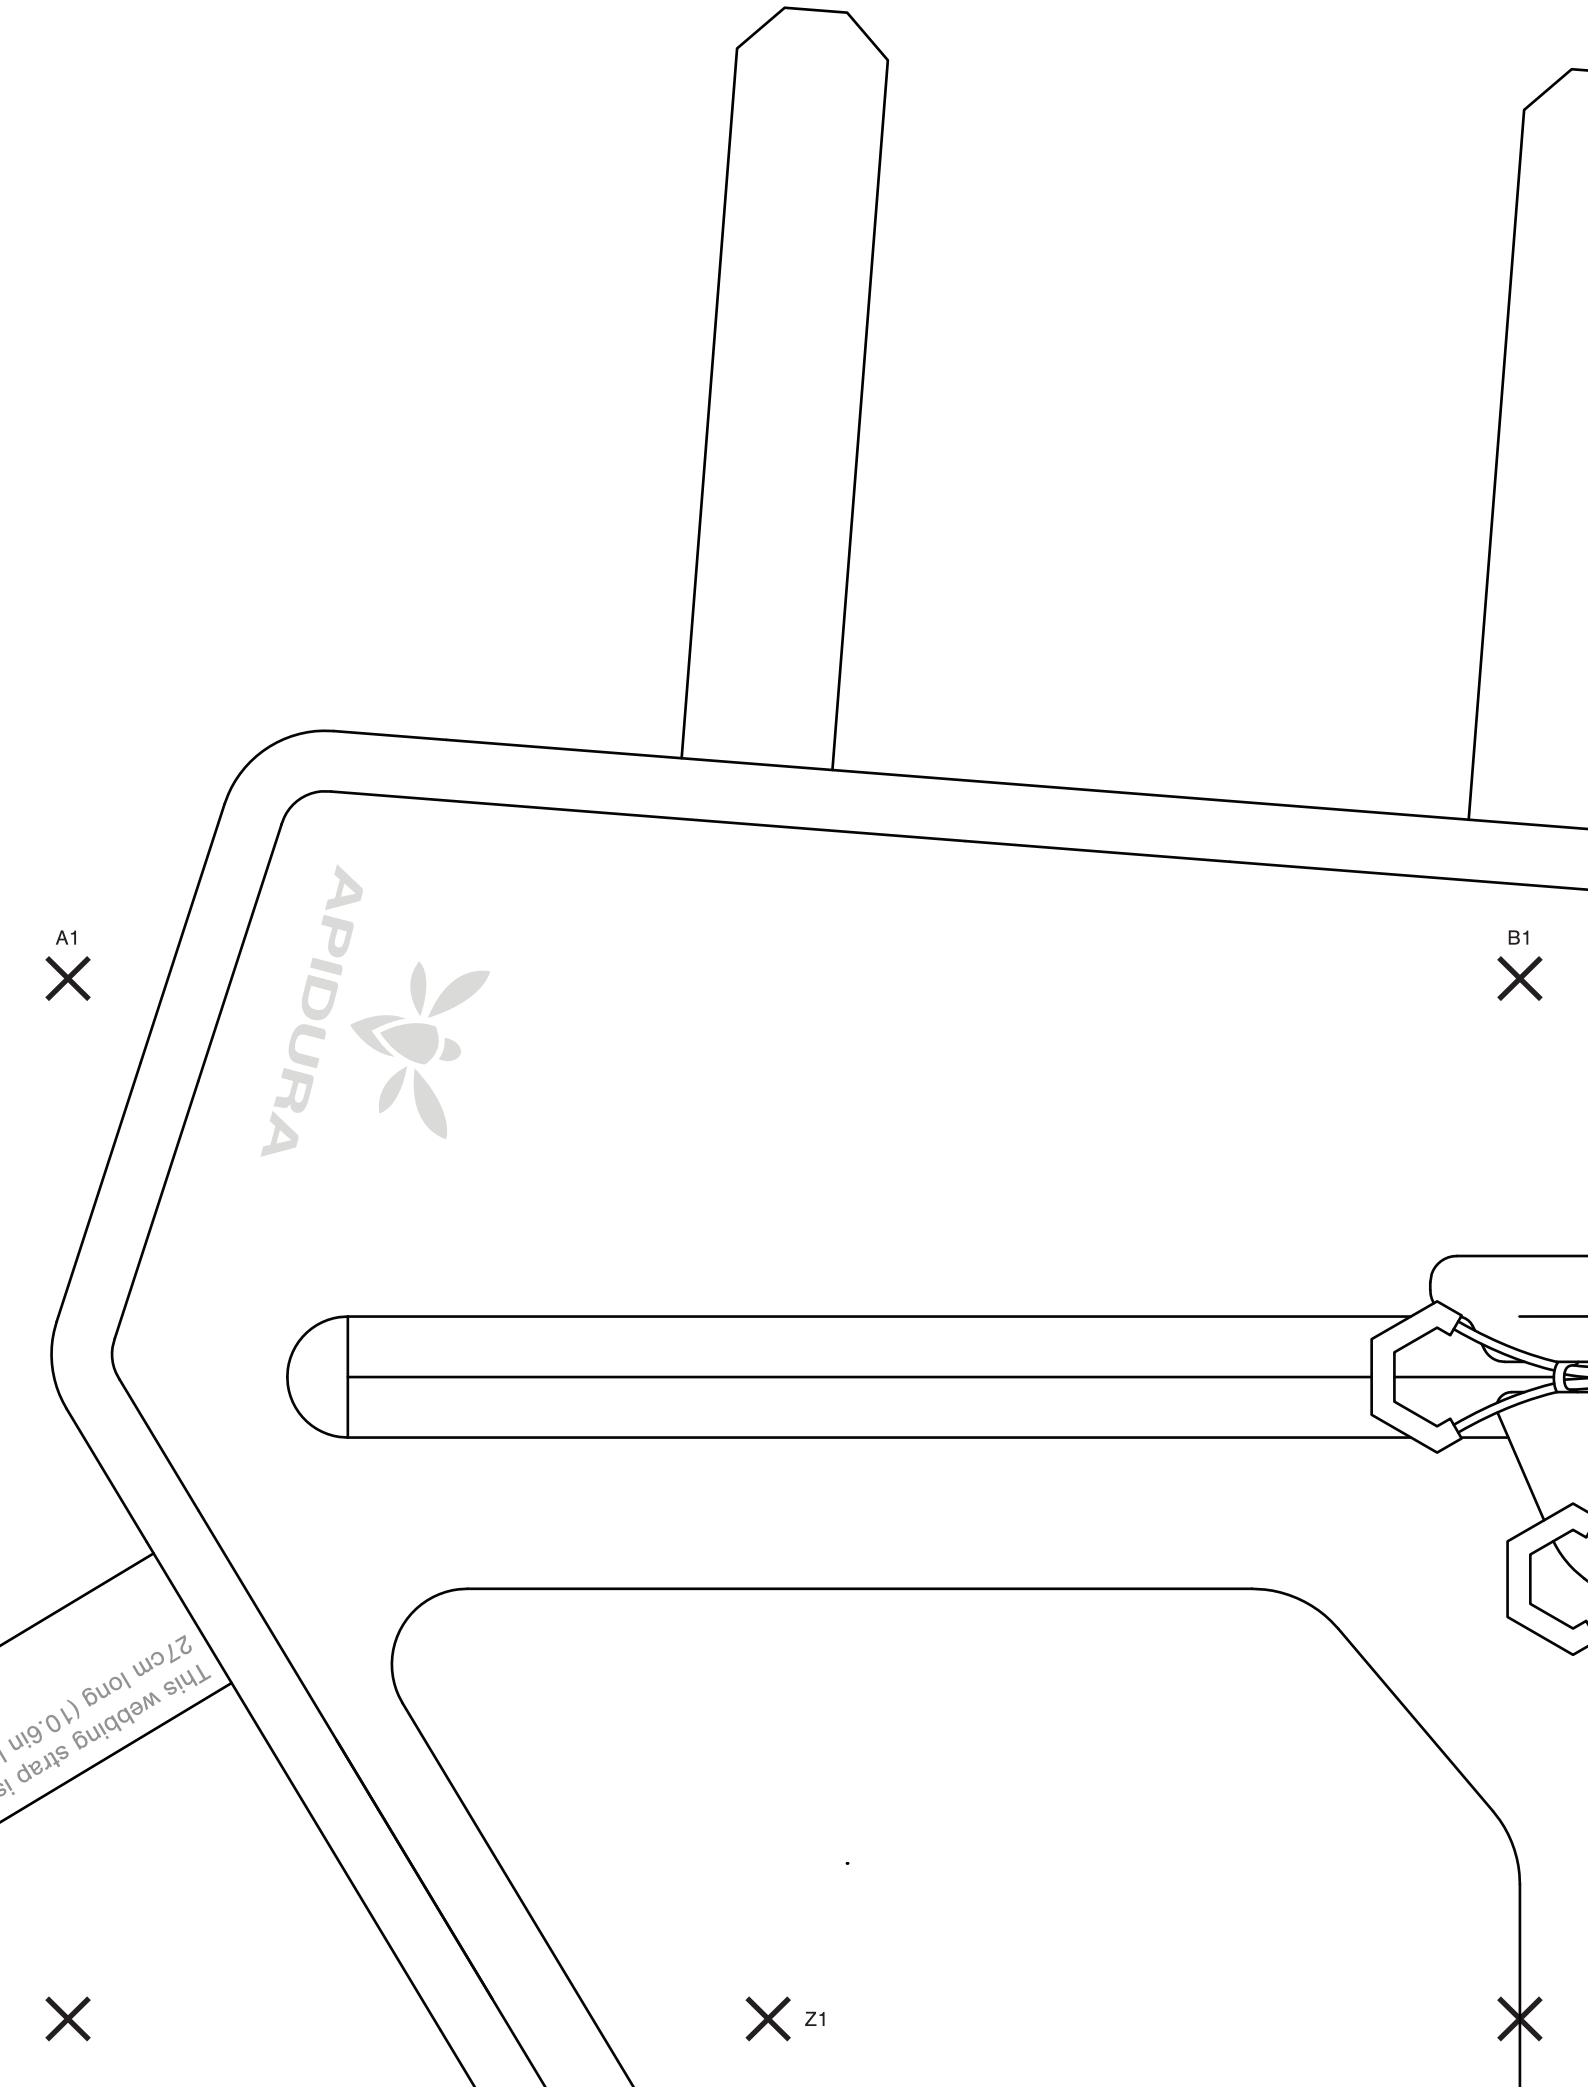


APIDURA

A1 X

B1 X

Z1 X

This webbing strap is  
27cm long (10.6in)

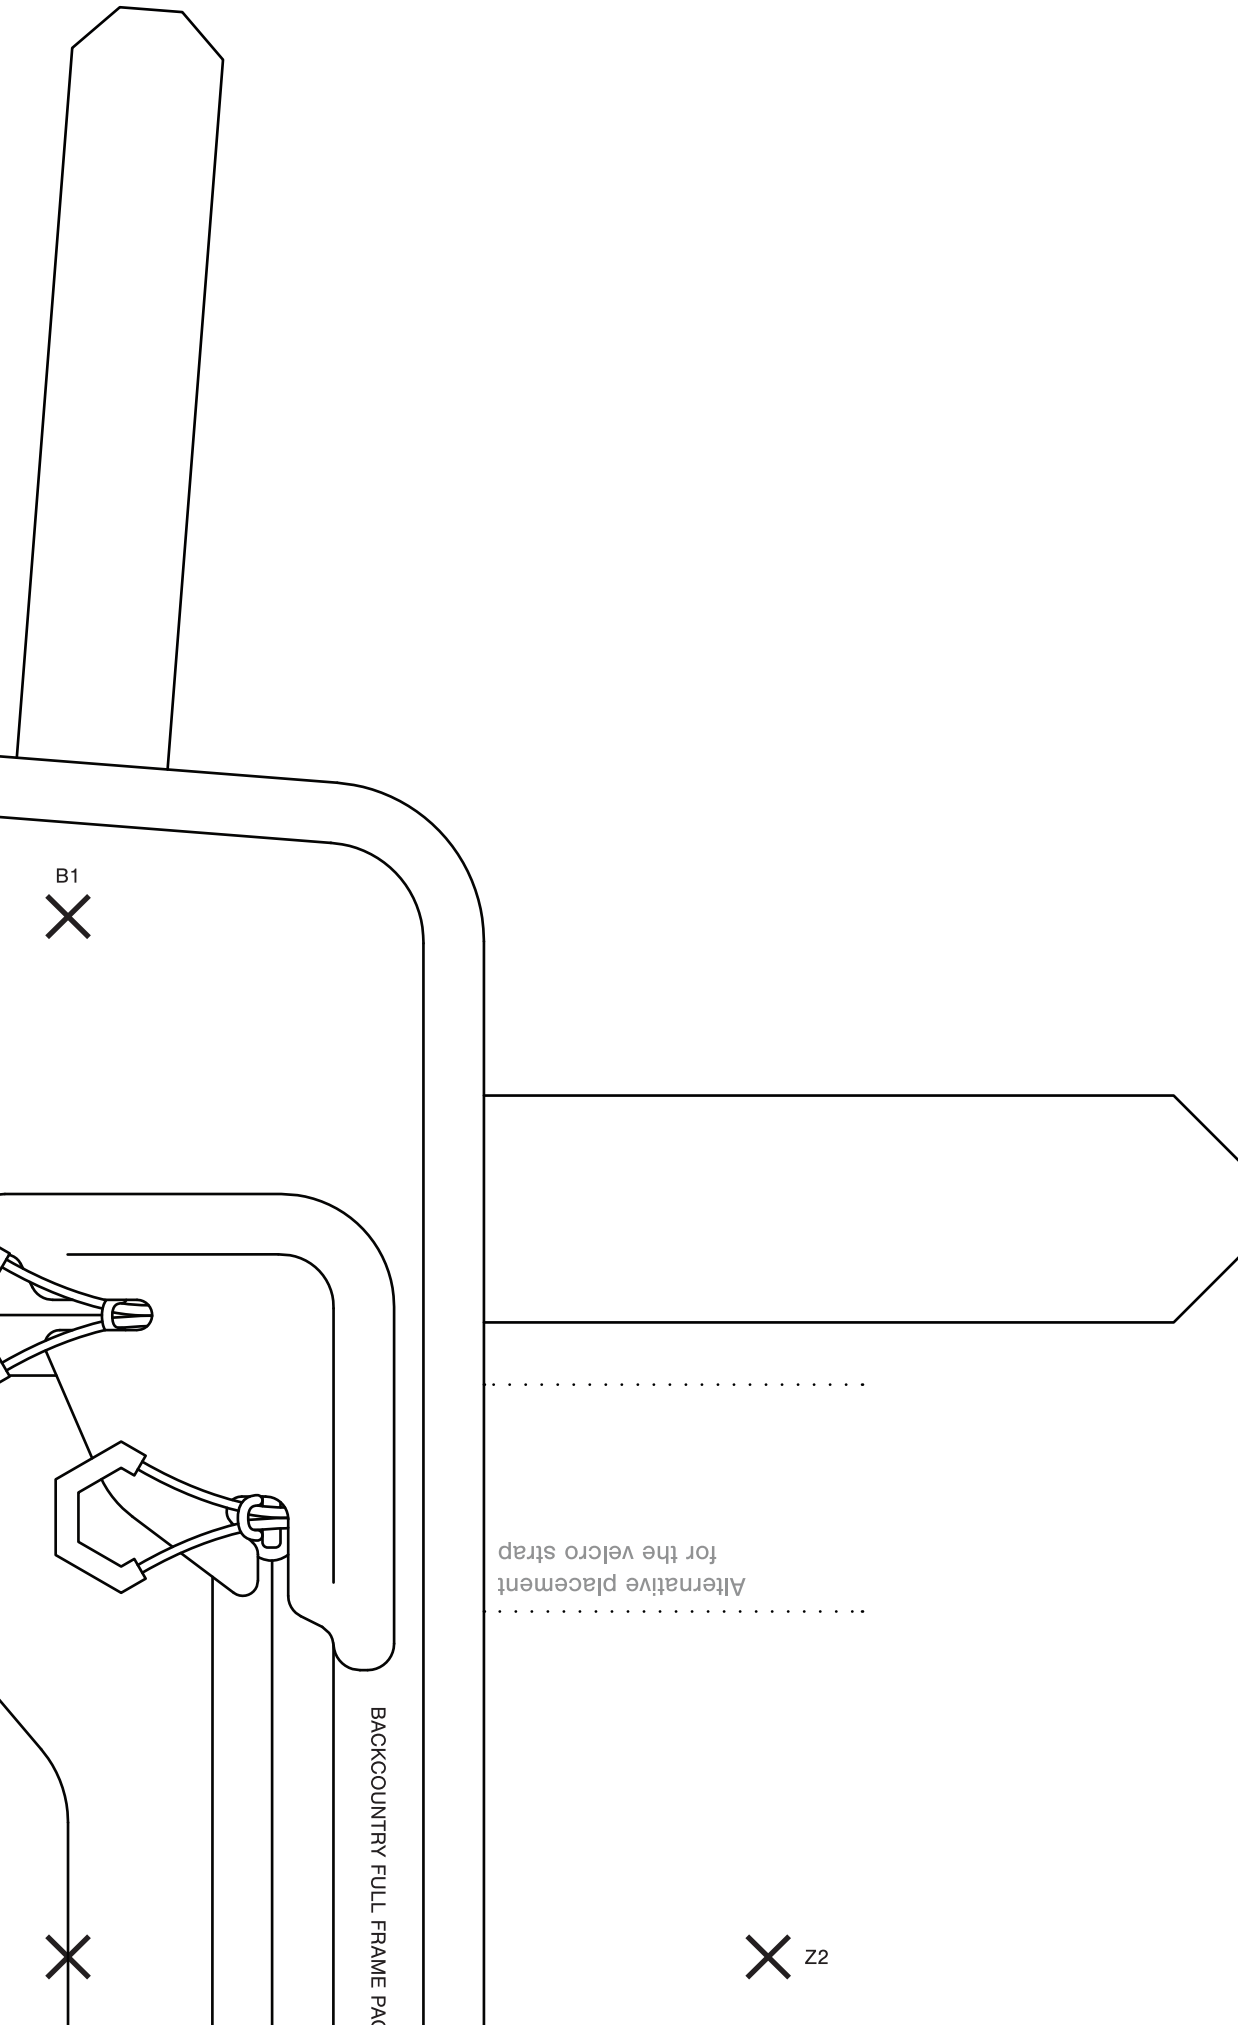

B1

X



BACKCOUNTRY FULL FRAME PACK

Alternative placement  
for the velcro strap

X Z2



This webbing strap is  
27cm long (10.6in long)

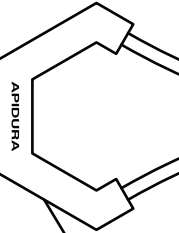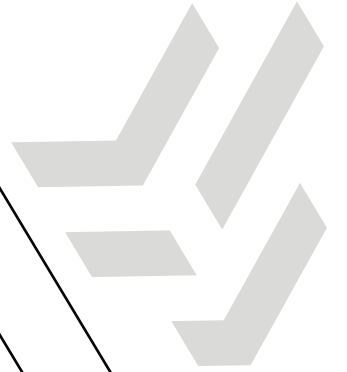

This webbing strap is  
27cm long (10.6in long)

